

IMPORTANT SAFEGUARDS

 
When using electrical appliances, the following basic safety precautions should always be adhered to :

- 1) Read all instructions.
- 2) Avoid electrical shock: Do not put cord plug, base, or motor in water or other liquid; never put a wet cord into a socket, or handle with wet hands; and never immerse motor / base into water, wipe with a damp cloth only and dry promptly.
- 3) Close supervision is necessary when any appliance is used by or near children.
- 4) Unplug from outlet when not in use, before using the parts (putting on or taking off) and before cleaning.
- 5) Avoid contact with moving parts.
- 6) Do not operate any appliance with a damaged cord or plug. If the appliance malfunctions, is dropped, or damaged in any manner, return appliance to TRIBEST or authorized service facility for repair.
- 7) Only use attachments sold by TRIBEST with the motor base.
- 8) Do not let cord hang over edge of table or counter, or touch the stove or other hot surfaces.
- 9) A rubber spatula is recommended to avoid scratching the cups.
- 10) Blades are sharp, handle carefully.
- 11) To avoid injury properly attach the cutting unit blades to the base.
- 12) Do not blend boiling or hot liquids(over 104F) in the cups.
- 13) Plug cord into wall outlet first, then operate blender.
To disconnect, take cup off, then remove plug from wall outlet.
- 14) Only use the appliance for its intended purpose.
- 15) Do not operate while driving a vehicle.
- 16) Always use on a level, sturdy surface.
- 17) Wash cup when finished with food preparation / consumption for easier cleaning.
- 18) Wash in warm water, do not put any parts in the dish washer, boiling, or hot water (exceeding 104F).
- 19) In continuous operation mode, always allow the Machine to rest for at least one minute between consecutive blending cycles of 30 seconds.
- 20) When blending in one minute cycles in continuous operation mode, do not exceed three consecutive cycles.
- 21) Household use only.(Do not use outdoor)
- 22) Store the Blending cups with either the lid or the blade. Make sure the parts are thoroughly dry.
- 23) This appliance has a polarized plug (one blade is wide than other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does fit fully in the outlet, reverse the plug.
If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.


SAVE THESE INSTRUCTIONS

Personal Blender


- Do not disconnect the power plug from the electrical outlet with wet hands.

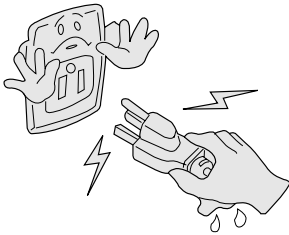

 
- Do not operate Tribest Personal Blender on an unstable surface.



 
- Do not assemble or disassemble while the power cord is plugged in.

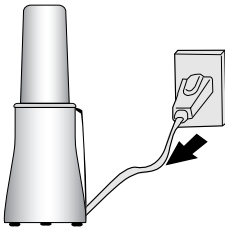

 
- Do not keep the Tribest Personal Blender where children can reach it.

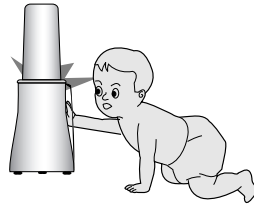

 - Do not put any articles such as spoons, knife or forks into the Blending or Grinding Cup while operating the machine.

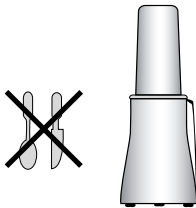

- Do not hold blade directly by hands.

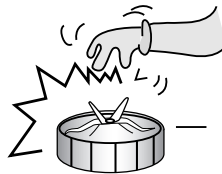 


PARTS DESCRIPTION


Q'ty	DESCRIPTION	PB-100	PB-200
1	200 watts, 1/4 horsepower, 110V 60 Hz Motor Base	✓ Included	✓ Included
2	2 Cup size Blending Cup	✓ Included	✓ Included
1	S/S Blending Blade Assembly (4 pronged)	✓ Included	✓ Included
2	1 Cup size Grinding Cup	Optional	✓ Included
1	S/S Grinding Blade Assembly (2 pronged)	Optional	✓ Included

Other Optional Parts & Accessories:
(Please call for availability)

 
- **Inverter** - 300 watts for car, camper, RV, boat use, converts 120 to 12 volts power
- **Carrying Case**
- **Grinder unit includes :**
 - ▶ 2 1 Cup size Grinding Cups
 - ▶ 1 S/S Grinding Blade Assembly(2 pronged)
 - ▶ 2 Cup Lids

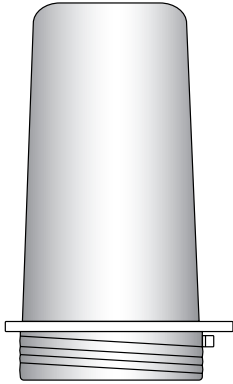


2 Cup size Blending Cup

 


Cup Lid

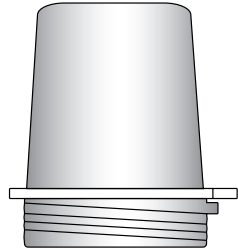 


1 Cup size Grinding Cup

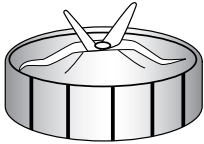 

S/S Blending Blade Assembly
(4 pronged)

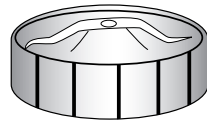 

S/S Grinding Blade Assembly
(2 pronged)

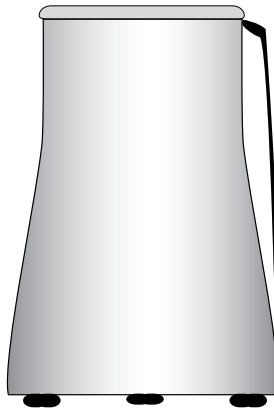 

MOTOR BASE

OPERATION GUIDELINES

- 1) Plug the power cord into desired outlet (wall or inverter).
- 2) Fill the Cup with desired ingredients
 - Blending : at least 1/4 - cup liquid for any recipe - up to 1 1/4 - cup maximum liquid
 - Grinding : at least 1/4 - cup for any recipe - up to 1/2 - cup maximum
- 3) Cover and close tightly the Blending/Grinding Blade Assembly onto Blending / Grinding Cup, invert and place into Motor Base.
- 4) Turn Blender / Grinder to fit into small notch (groove), once in place, press down. For pulsing, press down and release. For continuous use, press down and turn Blender / Grinder to the right (clockwise) until you hear a click.
- 5) Machine will stay on until you press down and turn to the left (counterclockwise). This stops the Blending / Grinding.
- 6) Lift Blender / Grinder top off and turn it onto its top side, to open the Blade unit. Pour into appropriate serving cup, or drink right out of the Blending Cup.
- 7) Rinse parts, and store for next use.
- 8) Your Personal Blender has a Thermo-Protection device. It shuts off automatically when the motor gets overheated. If this happens, unplug the unit and wait for 20 minutes to restart the operation.

CLEANING AND STORE

Keep your appliance ready for use on the kitchen counter.

When it is not being used, leave it unplugged.

Store blades in a convenient, safe place out of children's reach as you would with sharp knives.

All parts except the motor base are hand washable (water temperature should not exceed 104F). To simplify cleaning, rinse blending/grinding Cups and Blades immediately after use so food does not dry on them.

When you wash the Blades by hand, do it carefully. Avoid leaving them in soapy water, where they may disappear from sight.

The Blending / Grinding Cup is made of strong and clear plastic Polycarbonate with high impact resistance. Its smooth surface will look new for years when properly maintained. Keep a sponge handy as you work and wipe spills from base. Do not use abrasive cleaners on base.

The rubber feet on the bottom of the motor base will keep the Blender from moving on most work surfaces when the machine is processing heavy loads. Clean the rubber feet regularly. When the rubber feet are dirty, the machine could movements on counter. If feet leave spots on counter, spray with spot remover and wipe with damp sponge. If any trace of spot remains, repeat procedure and wipe area the with a damp sponge and non –abrasive cleaner.

WARRANTY

1. Tribest warrants to you, the end-user customer who has registered, that the new Tribest Personal Blender will be free from defects in materials and workmanship for a period of one(1) year from the date of purchase.
2. Upon Tribest' s receipt of a written notice of such defects from you during the warranty period, Tribest, at its option, will either repair or replace the Tribest Personal Blender that proved to be defective. The replacement of the Tribest Personal Blending may be either new or like new. The Tribest Personal Blender may contain re-manufactured or re-conditioned parts, which is equivalent to new in performance or may have been subjected to incidental use.
3. This warranty does not apply to defects resulting from:
 - ⟨a⟩ the failure to operate the Tribest Personal Blender in accordance with the instructions.
 - ⟨b⟩ the use of parts or supplies not provided or authorized by Tribest.
 - ⟨c⟩ Negligent, improper of inadequate maintenance.
 - ⟨d⟩ the service performed or attempted by unauthorized service person(s)
 - ⟨e⟩ tampering, misuse, or unauthorized modification of the Tribest Personal Blender.
4. All warranty and repair services must be performed at a warranty service center, which is located within the country where the Personal Blender was originally purchased, However, in the event that: [I] the machine must be serviced at a service center, which is not located within the country where the machine was purchased; or [II] there in no service center within the country where the machine is located and must be shipped to a service center in another country, then those service centers are responsible for the parts and service only, and any and all costs relating to the shipping, delivery and handling of the machine to and from those service centers shall be the sole responsibility of the owner.
5. TRIBEST MAKES NO OTHER EXPRESS OR IMPLIED WARRANTY OR CONDITION WHETHER WRITTEN OR ORAL. TO THE EXTENT ALLOWED BY LOCAL LAW, ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR IMPLIED WARRANTY OR CONDITIONS OF MERCHANTA-

BILITY OR SATISFACTORY QUALITY IS LIMITED TO ONE(1) YEAR. In the event that such limitation or exclusion on the duration of an implied warranty is not allowed in the states or counties wherein you reside, the above limitation or exclusion will not apply. This warranty gives you specific legal rights and protection, and you might also have other rights that vary from state to state, or county to county.

6. TO THE EXTENT ALLOWED BY LOCAL LAW, THE REMEDIES IN THIS WARRANTY STATEMENT ARE YOUR SOLE AND EXCLUSIVE REMEDIES. EXCEPT AS INDICATED ABOVE, IN NO EVENT WILL TRIBEST BE LIABLE FOR DIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL(INCLUDING LOST PROFIT), OR OTHER DAMAGE, WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. Some states or counties might not allow the exclusion or limitation of incidental or consequential damages. If you reside in such a state or county, the above limitation or exclusion may not be applicable.

In the event that you have any questions concerning the use and care fo this product or concerning service, please write a letter or send e-mail to following address explaining the nature of your concern, or call us at 888-618-2078.

***Tribest Corp.
P.O.Box 4089
Cerritos, CA 90703
website : www.personalblender.com
e-mail : service@personalblender.com***

Model#

Serial#

Date Warranty mailed

BASIC INFORMATION / SPECIAL FEATURES

Tribest Personal Blender has several special features including :

- 1) **Simple** to use and **easy to clean up**.
- 2) **Very portable**, lightweight (under **3 pounds**).
- 3) **Efficient** and quick **food preparation**; recipes can be **completed in less than one minute**.
- from start to finish (put food in, blend, eat and enjoy).
- 4) Convenient to **use anywhere you go**: at home, at work, or on business trips, or even on vacation.
- 5) **Use on the road**: in your car, camper, RV or boat with inverter (optional part).
- 6) So very **versatile** - prepare many delicious recipes: from smoothies to soups, from pesto to puddings and more **in less than 30 seconds**.
- 7) 2 mode Operations: **Pulse Blending / Grinding & Continuous Blending/Grinding**.
- 8) **Multifunctional**: use as a grinder as well, making a powder / flour out of nuts, seeds, or even grinding fresh coffee beans (with the grinder blade and cup).
- 9) **Compact and powerful** - 200 watts of power packed blending and grinding power.
- 10) **Healthy** food preparation - use whole fresh foods to make into a wide variety **easy to swallow / no chewing necessary dishes**.
- 11) **Quick** and easy **baby food** preparation from fresh and wholesome foods to nourish and feed growing children.

PRODUCT STANDARD		
* ITEM	FOOD PROCESSOR	
* METHOD	BLENDER	GRINDER
* MODEL	PB-100, 200	
* VOLTAGE	AC 120V	
* FREQUENCY	60Hz	
* ELECTRIC POWER	200W	
* CUP SIZE	300 CC (2 CUP)	150 CC (1 CUP)
* PRODUCT SIZE	124mm × 124mm × 312mm (4.89in × 4.89in × 12.29in)	124mm × 124mm × 250mm (4.89in × 4.89in × 9.85in)
* WEIGHT	1.2Kg(2.651 lb)	